

Setting Up a Linux Host for LTIB Builds on Ubuntu 9.04

1 Setting Up a Linux Host for LTIB Builds on Ubuntu 9.04

NOTE

Please be methodical and Do Not Skip Any Steps.

LTIB is very picky and will likely not work unless this build environment is correct.

- Ubuntu 9.04 (Jaunty Jackalope) Desktop is the only supported Linux distribution for LTIB build hosts.
 - Both the 32 Bit and the 64 Bit install from the Desktop CD are supported.
 - Other versions of Ubuntu are not supported and may have build issues.
- The install ISO image is available from:
 - <http://old-releases.ubuntu.com/releases/9.04/>

1.1 Proxy

- The Ubuntu package manager requires network access to download packages. If the Ubuntu host is on a network that requires a network proxy, this can be configured in the Gnome menu option "System \-> Preferences \-> Network Proxy"
- Once the settings are filled in, ensure that you click on the "Apply System Wide" button.

Contents

1	Setting Up a Linux Host for LTIB Builds on Ubuntu 9.04.....	1
1.1	Proxy.....	1
1.2	Update Sources.list to Point to Old-releases Repository.....	2
1.3	Upgrade to the Latest Packages.....	3
1.4	Sudoers.....	3
1.5	Install Host Packages Needed by LTIB.....	3
1.6	Set an Upper Limit on ccache.....	4
1.7	Configure tftp Server.....	4
1.8	Configure nfs Server.....	4
1.9	Setting up Samba Shares.....	5
1.10	Remote desktop.....	5
1.11	Special for Ubuntu 11.10.....	6

- If you had a terminal window open before setting the proxy, it will have the old settings. Open a new terminal window to get the new values.
- To check the settings run the following command:

```
user@ubuntu:~$ env | grep proxy
http_proxy=http://example:8080/
ftp_proxy=ftp://example:8080/
https_proxy=https://example:8080
```

1.2 Update Sources.list to Point to Old-releases Repository

- Ubuntu 9.04 is considered an old release, so the package manager can't get packages from Canonical's normal repository.
- A 'sources.list' is included in the documentation package. This sources.list adjusts the package manager's source paths to point to 'old-releases.ubuntu.com'.
- Copy the included 'sources.list' file to /etc/apt/sources.list
- If the 'sources.list' is not included, copy the following to a file and copy it to /etc/apt/sources.list

```
# deb cdrom:[Ubuntu 9.04 _Jaunty Jackalope_ - Release i386 (20090420.1)]/ jaunty main
restricted
# See http://help.ubuntu.com/community/UpgradeNotes for how to upgrade to
# newer versions of the distribution.

deb http://old-releases.ubuntu.com/ubuntu/ jaunty main restricted
deb-src http://old-releases.ubuntu.com/ubuntu/ jaunty main restricted

## Major bug fix updates produced after the final release of the
## distribution.
deb http://old-releases.ubuntu.com/ubuntu/ jaunty-updates main restricted
deb-src http://old-releases.ubuntu.com/ubuntu/ jaunty-updates main restricted

## N.B. software from this repository is ENTIRELY UNSUPPORTED by the Ubuntu
## team. Also, please note that software in universe WILL NOT receive any
## review or updates from the Ubuntu security team.
deb http://old-releases.ubuntu.com/ubuntu/ jaunty universe
deb-src http://old-releases.ubuntu.com/ubuntu/ jaunty universe
deb http://old-releases.ubuntu.com/ubuntu/ jaunty-updates universe
deb-src http://old-releases.ubuntu.com/ubuntu/ jaunty-updates universe

## N.B. software from this repository is ENTIRELY UNSUPPORTED by the Ubuntu
## team, and may not be under a free licence. Please satisfy yourself as to
## your rights to use the software. Also, please note that software in
## multiverse WILL NOT receive any review or updates from the Ubuntu
## security team.
deb http://old-releases.ubuntu.com/ubuntu/ jaunty multiverse
deb-src http://old-releases.ubuntu.com/ubuntu/ jaunty multiverse
deb http://old-releases.ubuntu.com/ubuntu/ jaunty-updates multiverse
deb-src http://old-releases.ubuntu.com/ubuntu/ jaunty-updates multiverse

## Uncomment the following two lines to add software from the 'backports'
## repository.
## N.B. software from this repository may not have been tested as
## extensively as that contained in the main release, although it includes
## newer versions of some applications which may provide useful features.
## Also, please note that software in backports WILL NOT receive any review
## or updates from the Ubuntu security team.
# deb http://us.old-releases.ubuntu.com/ubuntu/ jaunty-backports main restricted
universe multiverse
# deb-src http://us.old-releases.ubuntu.com/ubuntu/ jaunty-backports main restricted
universe multiverse

## Uncomment the following two lines to add software from Canonical's
```

```
## 'partner' repository.
## This software is not part of Ubuntu, but is offered by Canonical and the
## respective vendors as a service to Ubuntu users.
# deb http://archive.canonical.com/ubuntu jaunty partner
# deb-src http://archive.canonical.com/ubuntu jaunty partner

deb http://old-releases.ubuntu.com/ubuntu/ jaunty-security main restricted
deb-src http://old-releases.ubuntu.com/ubuntu/ jaunty-security main restricted
deb http://old-releases.ubuntu.com/ubuntu/ jaunty-security universe
deb-src http://old-releases.ubuntu.com/ubuntu/ jaunty-security universe
deb http://old-releases.ubuntu.com/ubuntu/ jaunty-security multiverse
deb-src http://old-releases.ubuntu.com/ubuntu/ jaunty-security multiverse
```

1.3 Upgrade to the Latest Packages

- Open up System \-> Administration \-> Update Manager
- Click on Settings.
- Open the Updates Tab.
- Set 'Release upgrade' to 'Never'. That makes the option to upgrade to Karmic go away.
- Close the settings dialog box.
- Click on 'Check' to check for upgraded packages. It will look for packages that are upgraded from the version that is installed on your box.
- Choose to install the upgrades. This will take a while on a freshly installed box.

1.4 Sudoers

- LTIB is executed as a regular user but requires root privileges during execution. To accommodate this, the sudoers file needs to be modified.
- Run this command to edit the sudoers file:

```
sudo visudo
```

- Add the following line to the end of the sudoers file.

```
%admin ALL = NOPASSWD: /usr/bin/rpm, /opt/freescale/ltib/usr/bin/rpm
```

- The %admin specifies any user in the group 'admin' thus your user name must be in this group. If that is not the case, a similar line can be added for each user. Please refer to the man page on sudoers for additional information:

```
man sudoers
```

NOTE

If the sudoers' file is not updated before running LTIB, the recommended sudoers' line will be shown when LTIB exits.

1.5 Install Host Packages Needed by LTIB

- The default Ubuntu Desktop installation requires additional packages installed for LTIB.
- The following script is used to facilitate the installation of the required packages. You can copy and paste it to a text file (e.g., 'host-setup.sh') and make the file executable by the command `chmod +x host-setup.sh`. You can, then, run it to install the packages.

```
#!/bin/bash

# Install packages needed by LTIB
sudo aptitude -y install gettext libgtk2.0-dev rpm bison m4 libfreetype6-dev
sudo aptitude -y install libdbus-glib-1-dev liborbit2-dev intltool
sudo aptitude -y install ccache ncurses-dev zlib1g zlib1g-dev gcc g++ libtool
sudo aptitude -y install uuid-dev liblz2-dev
sudo aptitude -y install tcl dpkg
sudo aptitude -y install asciidoc texlive-latex-base dblatex xutils-dev

# Packages required for 64-bit Ubuntu
# Do "uname -a" and see if the word "x86_64" shows up.
if uname -a|grep -sq 'x86_64'; then
sudo aptitude -y install ia32-libs libc6-dev-i386 lib32z1
fi

# The following recommended for Linux development.
# They are not required by LTIB.
sudo aptitude -y install gparted emacs22-nox openssh-server
sudo aptitude -y install nfs-common nfs-kernel-server lintian
sudo aptitude -y install git-core git-doc git-email git-gui gitk
sudo aptitude -y install diffstat indent tofrodos fakeroot doxygen uboot-mkimage
sudo aptitude -y install sendmail mailutils meld atftpd sharutils
sudo aptitude -y install manpages-dev manpages-posix manpages-posix-dev linux-doc
sudo aptitude -y install vnc4server xvnc4viewer
```

1.6 Set an Upper Limit on ccache

- LTIB uses ccache on a per-user basis to speed up compilation. The cache that LTIB uses exists as a .ccache directory in each user's home directory. This directory can grow to be quite large if no upper limit is set.
- To set the upper limit of your ccache do these two steps. The first step sets the upper limit, for example, 50 Meg. The second step clears the cache to meet the limit.

```
ccache -M 50M
ccache -c
```

1.7 Configure tftp Server

- Install atftpd by running:

```
sudo aptitude -y install atftpd
```

Configure atftpd by editing /etc/inetd.conf and /etc/default/atftpd.

In both files, change the default export path (it is either /usr/var/tftpboot or /var/lib/tftpboot) to / or whatever other directory you want to be able to download from.

Then reboot your box.

1.8 Configure nfs Server

- Install nfs server by running:

```
sudo aptitude -y install nfs-common nfs-kernel-server
```

- To configure nfs server, add lines to /etc/exports like this (below example exports /home and everything under it.)

```
/home *(rw,no_root_squash)
```

- Then restart the nfs server:

```
sudo /etc/init.d/nfs-kernel-server restart
```

1.9 Setting up Samba Shares

- Use the GUI to share folders. For instance:
 - Click on "Places \-> Home Folder"
 - Right click on "Public" folder and select "Sharing Options"
 - Click on "Share Folder" and then give this share a unique name (i.e. it will be confusing if multiple people all have a 'public' share on the same machine).
 - If this is the first samba share you've done, it will ask for your password and go ahead and install samba for you.
- Alternatively, samba can be configured from the command line.
 - Install samba

```
sudo aptitude -y install samba
```

- Give yourself a samba password. Can be blank.

```
sudo smbpasswd -a YOURUSERNAME
```

- Edit the /etc/samba/smb.conf file and add a section such as this example:

```
[wilma]
comment = wilma
read only = no
locking = no
path = /home/wilma/Public
create mask = 0644
directory mask = 0770
```

- Restart samba:

```
sudo /etc/init.d/samba restart
```

1.10 Remote desktop

- Ubuntu comes with a remote desktop installed by default.
 - Enable it on the remote machine in System \-> Preferences \-> Remote Desktop
 - Connect using Applications \-> Internet \-> Remote Desktop Viewer
- Another option is VNC
 - On remote machine:

```
sudo aptitude -y install vnc4server
```

- See what vnc displays are already running for other users by doing "ps ax | grep vnc". The display numbers will have a colon like ':4'. Choose a number that is not already being used (':1' is used below).

- ```
vncserver :1
vncserver -kill :1
```
- Edit your `~/vnc/xstartup` to be like this:

```
#!/bin/sh

Uncomment the following two lines for normal desktop:
unset SESSION_MANAGER
exec /etc/X11/xinit/xinitrc

[-x /etc/vnc/xstartup] && exec /etc/vnc/xstartup
#[-r $HOME/.Xresources] && xrdb $HOME/.Xresources
#xsetroot -solid grey
vncconfig -iconic &
xterm -geometry 80x24+10+10 -ls -title "$VNCDESKTOP Desktop" &
#twm &
gnome-session &
```

- Now start it again:

```
vncserver :1 -geometry 1024x768 -depth 16
```

- If you get a gray screen when connecting from remote machine, try this:

```
sudo chmod 755 /etc/X11/xinit/xinitrc
```

- And add these lines to `xstartup`:

```
unset SESSION_MANAGER
unset DBUS_SESSION_BUS_ADDRESS
```

- And finally

```
sudo rm ~/.Xauthority*
```

- On local machine:

- Install the viewer.

```
sudo aptitude -y install xvnc4viewer
```

- Start `vncviewer`.

```
vncviewer HOSTNAME:DISPLAY
```

Where `HOSTNAME` is the remote hostname and `DISPLAY` is the display number you started above. Another VNC option is RealVNC which may be downloaded from [www.realvnc.com](http://www.realvnc.com), although it may be slower and the screen geometry may be limited to 1024X768.

## 1.11 Special for Ubuntu 11.10

- LKC: Add patch for in `lkc.spec` Summary : Linux kernel configuration language parser

```
Patch0 : lkc-1.4-lxdialog.patch
Patch1 : lkc-1.4-1.patch
Patch2 : lkc-1.4-ncurses.patch
Patch3 : lkc-1.4-help.patch
Patch4 : lkc-1.4-defaults-4.patch
Patch5 : lkc-1.4-search-5.patch
Patch6 : lkc-1.4-datestamp.patch
Patch7 : lkc-1.4-dashsource.patch
```

```
Patch8 : lkc-1.4-config_title-1.patch
Patch9 : lkc-1.4-config_filename-1.patch
\+Patch10 : lkc-1.4-link-order.patch
```

```
 %Prep
 %setup
 %patch0 \-p1
 %patch1 \-p1
 %patch2 \-p1
 %patch3 \-p1
 %patch4 \-p1
 %patch5 \-p1
 %patch6 \-p1
 %patch7 \-p1
 %patch8 \-p1
 %patch9 \-p1
 \+%patch10 \-p0
```

- MUX: Add pthread for mux\_server.spc \-pthread \-lpthread mux\_server.c \-o mux\_server
- Can't find: types.h ln \-s /user/include/i386-linux-gnu /usr/include

---

**How to Reach Us:**

**Home Page:**  
[freescale.com](http://freescale.com)

**Web Support:**  
[freescale.com/support](http://freescale.com/support)

Information in this document is provided solely to enable system and software implementers to use Freescale products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits based on the information in this document.

Freescale reserves the right to make changes without further notice to any products herein. Freescale makes no warranty, representation, or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Freescale data sheets and/or specifications can and do vary in different applications, and actual performance may vary over time. All operating parameters, including "typicals," must be validated for each customer application by customer's technical experts. Freescale does not convey any license under its patent rights nor the rights of others. Freescale sells products pursuant to standard terms and conditions of sale, which can be found at the following address: [freescale.com/SalesTermsandConditions](http://freescale.com/SalesTermsandConditions).

Freescale and the Freescale logo are trademarks of Freescale Semiconductor, Inc., Reg. U.S. Pat. & Tm. Off. All other product or service names are the property of their respective owners. ARM and ARM Cortex-A9 are registered trademarks of ARM Limited.

© 2013 Freescale Semiconductor, Inc.

